

Series CN 4000





Instruction manual





010516

UWT GmbH Westendstraße 5 D-87488 Betzigau

 Tel.: +49 (0)831 57123-0
 Internet:www.uwt.de

 Fax: +49 (0)831 76879
 E-Mail: info@uwt.de

Scope of this instruction manual:	Types	CN 4020 / 4030 / 4050	
	Approval	CE / TR-CU / ATEX / IEC-Ex	
	Electronic modules	Relay (SPDT, DPDT) PNP	

Table of Contents

Safety /warning notes	Page	4
Fields of application	Page	4
Technical Data	Page	5
Installation	Page	15
Electrical connection	Page	21
Settings	Page	27
Switching logic	Page	29
Maintenance	Page	30
Spare parts	Page	31
ATEX / IEC-Ex Notes	Page	32

Installation, maintenance and commissioning may be accomplished only by qualified technical personnel.

For terminal connection of the device, the local regulations or VDE 0100 (Regulations of German electrotechnical Engineers) must be observed. All field wirings must have insulation suitable for at least 250V AC. The temperature rating must be at least 90°C (194°F).

In the case of handling by untrained personnel or handling malpractice, the safety of the device cannot be guaranteed.

Fields of application

Level limit switch for level limit detection in powder and bulk materials.

Technical Data



Plastics PA





Aluminium









	min1bar (-14.5psi) max. +25bar (+363psi) ~ 0,5kg (1.1 lbs)	
کر ادو		







(1) = Aluminium (2) = Stainless steel



(1) = Aluminium (2) = Stainless steel



CN 4020 120°C







CN 4030



12



CN 4050



Bulk material



 ϵ_r Dielectric constant

Installation

CN 4020



(1) Protective angle (canopy) in case of high mechanical load

CN 4020



- (1) Mech. load of the sensor
- (2) Observe minimum distances





(1) Sliding sleeve: Tighten straining screws with 20Nm

CN 4030

Mech. load of the sensor



Observe minimum distances





- (1) Mech. load of the sensor
- (2) Observe minimum distances

Fixing Threads



Alignment

Ingress protection IP 66





Option: Weather protection cover



for Ex only approved for Zone 22

Electrical connection

Relay SPDT



21...27V DC ±10% (2), max. 1.5W



- (1) Power supply
- (2) Including 10% from EN 61010
- (3) Non inductive
- (4) Isolating voltage





- (1) Power supply
- (2) Including 10% from EN 61010
- (3) Non inductive
- (4) Isolating voltage

PNP



(1) 20...40V DC $\pm 10\%$ ⁽²⁾, max. 0.5A

- (1) Power supply
- (2) Including 10% from EN 61010

by process connection



(2) Use flat gasket, no teflon tape

⁽¹⁾ Metal

alternative by cable



- (1) Use internal or external terminal
- (2) Grounded metal parts in case of non metal bin

Settings

Relay SPDT



Relay DPDT / PNP



Signal output logic



(1) = Relais SPDT
(2) = Relay DPDT
(3) = PNP
(4) = LED Signal

Maintenance



Spare parts

CN 4020 120°C

SPDT	2127V DC	pl406100
DPDT	21230V AC 2145V DC	pl406110
PNP	2040V DC	pl406120

CN 4020 180°C

DPDT	21230V AC 2145V DC	pl406111
PNP	2040V DC	pl406121

CN 4030 / CN 4050

No spare parts available

SPDT

DPDT



PNP



Permitted relative pressure





32

Installation



- (1) A pull relief must be provided
- (2) Connect with equipotential bonding of the plant

ATEX / IEC-Ex: Further Remarks

For installation and field wiring the respectively valid installation regulations of the respective country must be observed.

Commissioning only with closed lid.

Do not remove the lid (cover) while circuits are alive.

Before opening the lid take care, that no dust deposits or whirlings are present.

The installation has to be carried out in a way, that mechanical friction or impact does not cause sparks between the aluminium enclosure and steel.

Cable glands:

Installation according to the regulations of the country, where the product is installed.

Not used entries have to be closed with blanking elements certified for this purpose.

Where applicable the factory provided parts must be used.

A strain relief must be provided for the field wiring cables, when the device is installed with the factory

provided cable glands.

The diameter of the field wiring cable must match to the clamping range of the cable clamp.

If other than the factory provided parts are used, following must be ensured: The parts must have an approval adequate to the approval of the level sensor (certificate and type of protection).

The approved temperature range must be from the min. ambient temperature of the level sensor to the max. ambient temperature of the level sensor increased by 10 Kelvin.

The parts must be mounted according to the instructions of the supplier.