## PDA2901/2904 ASSEMBLY INSTRUCTIONS

## WARNING

Verify that all ratings and approvals of provided components meet installation requirements.

CAUTION

Installation and service should be performed only by trained service personnel. Observe all applicable national and local codes.

Step		Desc	ription	A		В	
1.	n B. li n	ectangular cutoul nstall fuse holder	tch through small in front of panel. base through anti- nt of panel and secure ck of panel.			F.C.	
2.	B. lı b	Insert fuse into carrier. Insert carrier with fuse into fuse holder base and lock into position. E: Fuse provided is 5 A, 250 V, slow-blow as recommended in ConsoliDator Instruction Manual.					
Installation Tips	•	<ul> <li>Mounting hardware is provided. Follow ConsoliDator Instruction Manual for wiring and mounting.</li> <li>Before mounting ConsoliDator to panel, make connections to removable connector plugs.</li> <li>18-22 AWG is recommended wherever electrically suitable, for ease of use.</li> <li>Insulated quick connect terminals are optional. Solder connections are suggested.</li> <li>Terminals packaged with fuse holder will not fit switch tabs. Do not mix terminals.</li> </ul>					
Electrical Ratings And Approvals			Enclosure	Fuse Holder	Fuse	Switch	
	UL Rating		Type 1, 2, 3, 3R, 3S, 4, 4X, 6, 6P	250 V, 20 A	5 A, 250 V	10 A @ 125 VAC, 6 A @ 250 VAC	
	UL File		E229365	E14853	E10480	E121922	
	CSA Rating		N/A	250 V, 16 A	5 A, 250 V	N/A	
	CSA File		N/A	47235	29862	N/A	
Parts List	Qty	Description					
	1	Switch					
	2	Quick-Connect Terminal 0.187 X 0.020 for Fuse Tabs					
	2	Quick-Connect Terminal 0.187 X 0.032 for Switch Tabs					
	1	Fuse Holder (Base, Carrier, Gasket, Nut)					
	1	Fuse 5 A, 250 V					
	4	#8-32 SS Screw					
	4	1/4"-20 SS Screw					
	4	#8 SS Lock washer					
	4	#8-32 SS Hex Nut					
	4	Plastic Mounting Feet					



www.predig.com