

WEIGHTRAC 31

4 ... 20 mA/HART - four-wire Radiation-based sensor for mass flow detection



Application area

The WEIGHTRAC 31 is a radiation-based sensor for precise flow measurement of bulk solids. It is designed for mass flow determination on conveyor belts in all industries. Due to its frame construction, the WEIGHTRAC 31 can be simply retrofitted on the conveyor belt.

Your benefit

- · Wear-free, because non-contact measurement
- Exact determination of the delivery volume through simple setup

Function

In radiation-based measurement, a Caesium-137 or Cobalt-60 isotope emits focussed gamma rays. A special sensor on the opposite side of the vessel receives this radiation. The scintillator of the sensor converts these gamma rays into signals, the number of which is detected and evaluated. Since gamma rays are attenuated when penetrating matter, the sensor is able to calculate the level, the limit level, the density and the mass flow rate from the intensity of the received radiation.

Technical data	
Measuring range	0.5 … 1.6 m (1.64 … 5.25 ft)
Repeatability	± 1 % from the measuring range final value
Ambient, storage and transport temperature	-40 °C +60 °C (-40 °F +140 °F)Extended range avail- able
Voltage supply	
Operating voltage	20 72 V DC; 20 253 V AC, 50/60 Hz
Max. power consumption	4 W; 6 VA
Analogue input	
Input type	4 20 mA passive
Internal load	250 Ω
Switching input	
Input type	
 Open Collector 	10 mA
 Relay contact 	100 mA
Relay output	
Switching voltage	min. 10 mV, max. 253 V AC, 253 V DC
Switching current	min. 10 µA, max. 3 A AC, 1 A DC
Breaking capacity	min. 50 mW, max. 750 VA AC, 40 W DC
Current output	
Range	4 20 mA/HART, active or passive
Max. load	500 Ω (300 Ω with intrinsically safe IS)
Switching output	
Type of output	NPN transistor output (floating)
Switching voltage	< 55 V DC
Load current	100 1
Load current	< 400 mA

Materials/Scintillator

The detector tube consists of stainless steel, the frame of galvanized steel or stainless steel. Polyvinyltoluene (PVT) is used as scintillation material.

Housing versions

The housing is available as double chamber version of Aluminium or stainless steel in protection class IP 66/IP 67.

Electronics versions

The instruments are available in different electronics versions. Apart from the four-wire electronics with 4 ... 20 mA/HART, two purely digital versions with Profibus PA and Foundation Fieldbus are possible.

Approvals

You can find detailed information on the existing approvals in the "*con-figurator*" on our homepage at <u>www.vega.com/configurator</u>.




Operation

The adjustment of the instrument is carried out via the optional display and adjustment module PLICSCOM or via a PC with the adjustment software PACTware and corresponding DTM. Further adjustment options are available via HART communicator as well as manufacturerspecific programs such as AMS[™] or PDM.




Electrical connection

Two connection chambers are available. Depending on the instrument version, the signal output is either in the primary or in the secondary chamber.

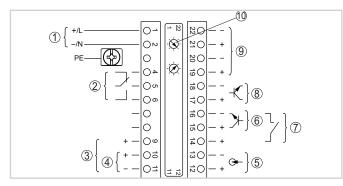

Primary terminal connections


- 1 Voltage supply
- 2 Relay output
- 3 Signal output 4 ... 20 mA/HART active
- 4 Signal output 4 ... 20 mA/HART passive
- 5 Signal input 4 ... 20 mA
- 6 Switching input for NPN transistor
- 7 Switching input floating
- 8 Transistor output
- 9 Interface for sensor-sensor communication
- 10 Setting the bus address for sensor-sensor communication (MGC)

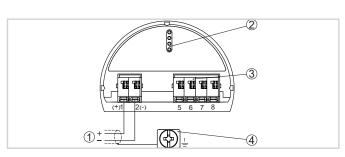

Secondary terminal connections

- 1 4 ... 20 mA output option (only intrinsically safe instruments)
- 2 PLICSCOM connection
- 3 Connections for external indication (VEGADIS 61)
- 4 Ground connection

Dimensions

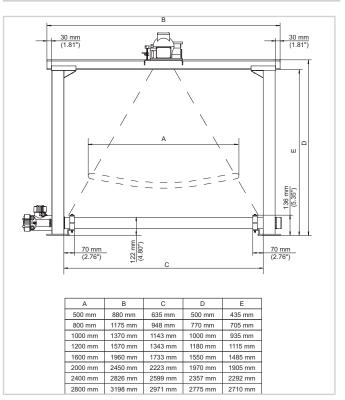

Dimensions WEIGHTRAC 31

Source container not in the scope of delivery

Information

You can find further information on the VEGA product line on our homepage <u>www.vega.com</u>.

In the download section under <u>www.vega.com/downloads</u> you'll find free operating instructions, product information, brochures, approval documents, instrument drawings and much, much more.

Instrument selection

With the "*Finder*" at <u>www.vega.com/finder</u> and "*VEGA Tools*" you can select the most suitable measuring principle for your application. You can find detailed information on the instrument versions in the "*Configurator*" at <u>www.vega.com/configurator</u> and "*VEGA Tools*".

Contact

You can find the VEGA agency serving your area on our homepage www.vega.com.