

# VEGAMIP R62/T61

# Relay

# Microwave receiver in separate version for level detection of bulk solids and liquids



### **Application area**

The VEGAMIP T61 is the emitting unit, the VEGAMIP R62 the receiving unit of the microwave barrier in separate version for level detection of bulk solids and liquids. Typical applications are the detection of bulk solids in silos, bunkers and crushers as well as of liquids in pipelines and vessels. The non-contact measuring principle has no direct contact with the medium and ensures continuous wear-free and maintenancefree operation.

#### Your benefit

- · Reliable measurement even with very abrasive products
- Separate instrument version enables mounting for hardly accessible installation locations
- Reliable measurement even with changing product properties

### Function

The measuring system consists of a microwave emitter and a corresponding receiver. The emitted signal is focused by an antenna system and radiated in the direction of the receiver. A medium in the path of the beam damps the signal. This signal damping is detected by the receiver and converted into a switching signal. The built-in sensitivity adjustment makes it easy to adapt the instrument to the local conditions and the medium.

### **Technical data**

Process pressure	-1 +4 bar/-100 +400 kPa (-14.5 +58 psig)
Process temperature	-40 +80 °C (-40 +176 °F)
Process temperature with mounting adapter	-40 +450 °C (-40 +842 °F)
Ambient, storage and transport temperature	-40 +80 °C (-40 +176 °F)
Hysteresis	approximately 1.33 dB
Process fitting	Thread from G1½, 1½, NPT, flanges, Clamp
Operating voltage	20 253 V AC, 50/60 Hz; 20 72 V DC
Power consumption	1 8 VA (AC), approximately 1.5 W (DC)
Switching voltage	min. 10 mV, max. 253 V AC, 253 V DC
Switching current	min. 10 $\mu A$ / max. 3 A AC, 1 A DC
Breaking capacity	min. 50 mW, max. 750 VA AC, 54 W DC

### Materials

The wetted parts of the instrument are made of stainless steel 316L and PTFE. The optional mounting adapter for process temperatures up to 450 °C is made of 316L and has a cover of ceramic  $Al_2O_3$ . You will find a complete overview of the available materials and seals in the "configurator" on our homepage at <u>www.vega.com/configurator</u>.

### Housing versions

The housings are available in plastic, stainless steel or Aluminium. They are available with protection ratings up to IP 67.

### **Electronics versions**

The receiving unit is available in different electronics versions. A transistor or a relay output with two floating spdts is possible.

# Approvals


The instruments are suitable for use in dust explosive areas and are approved e.g. according to ATEX, FM, CSA and IEC. You can find detailed information on the existing approvals in the "*Configurator*" unter "*VEGA Tools*" on our homepage.



## Specification sheet

### Operation


You can adjust the mode and sensitivity of the level switch on the electronics module of the receiving unit (R). Control lamps indicate operation, switching status of the instrument and possible faults.

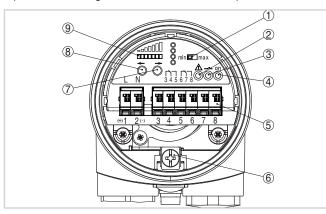

Electronics module receiving unit MP60EE.R - Relay output


- 1 Mode switch for selecting the switching behaviour (min./max.)
- 2 Control lamp (LED) for indication of a fault (red)
- 3 Signal lamp (LED) for indication of the switching status (yellow)
- 4 Control lamp (LED) for indication of the instrument function (green)
- 5 Connection terminals
- 6 Ground terminal
- 7 DIL switch for sensitivity adjustment (-->)
- 8 DIL switch for sensitivity adjustment (<--)
- 9 LED indicating board for indication of reception strength (yellow)

### **Electrical connection**

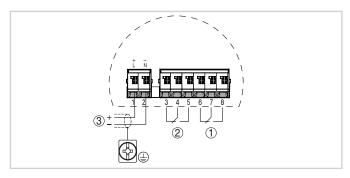

Wiring plan, Receiving unit - VEGAMIP R62 R (receiver)

- 1 Relay output
- 2 Relay output
- 3 Voltage supply

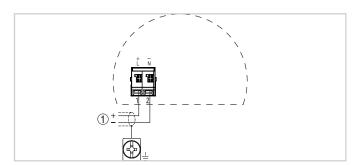


Wiring plan, Emitting unit - VEGAMIP R62 T (transmitter)

1 Voltage supply

You can find details on electrical connection in the instrument operating instructions on our homepage at www.vega.com/downloads.

### Dimensions

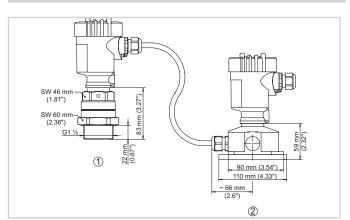

#### VEGAMIP R62

- 1 Receiving unit
- 2 External housing (evaluation unit)/Remote adjustment

#### Information

You can find further information on the VEGA product line on our homepage <u>www.vega.com</u>.

In the download section under <u>www.vega.com/downloads</u> you'll find free operating instructions, product information, brochures, approval documents, instrument drawings and much, much more.

### Instrument selection

With the "*Finder*" at <u>www.vega.com/finder</u> and "*VEGA Tools*" you can select the most suitable measuring principle for your application. You can find detailed information on the instrument versions in the "*Configurator*" at <u>www.vega.com/configurator</u> and "*VEGA Tools*".

### Contact

You can find the VEGA agency serving your area on our homepage www.vega.com.